


## 13252, 13253 Instructions CampingBox M + Bed Exemplary Citroën Spacetourer

### 1 Installation 13252, 13253

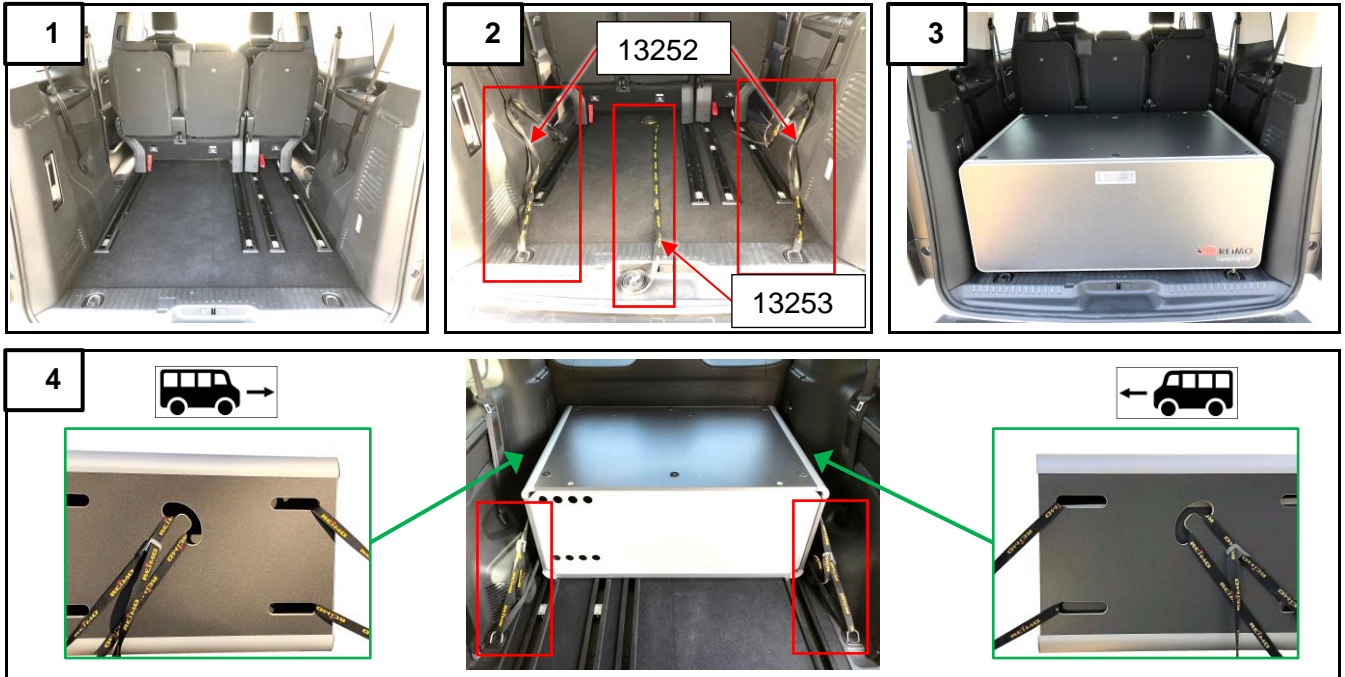

### 2 Installation 13253

