

13602, 13500, 13503, 13502**DE: Einbauanleitung Einrichtung Weekender in VW Caddy 4 Maxi****Fahrzeugzuordnung**

Übersicht der relevanten technischen Daten des Basisfahrzeugs.

Marke	Modell	Produktionszeitraum	Länge [mm]
Volkswagen	Caddy 4 Maxi (PKW)	2008 - 2020	4875

Produktabbildung**Hinweis:** Mit eingebauter Weekender-Einrichtung ist das Fahrzeug noch als 5-Sitzer nutzbar.

Übersicht der Hauptkomponenten

Pos.-Nr.	Menge	Art.-Nr.	Bezeichnung
1	1	13500	Bodenplatte
2	1	51220	Bodenabschlussleiste (optional)
3	1	13602	Heckbett
3a	1		Befestigungsset (im Heckbett-Lieferumfang)
3b	1		Polsterset, 7-teilig (im Heckbett-Lieferumfang)
4	1	13503	Tischplatte
5	1	57000	Tischbein
6	1	57056	Tischschiene mit Quick Clip-Beschlag



Pos. 1: Bodenplatte (Dekor beispielhaft)




Pos. 2: Bodenabschlussleiste



Pos. 3: Heckbett, Baugruppe links



Pos. 3: Heckbett, Baugruppe rechts

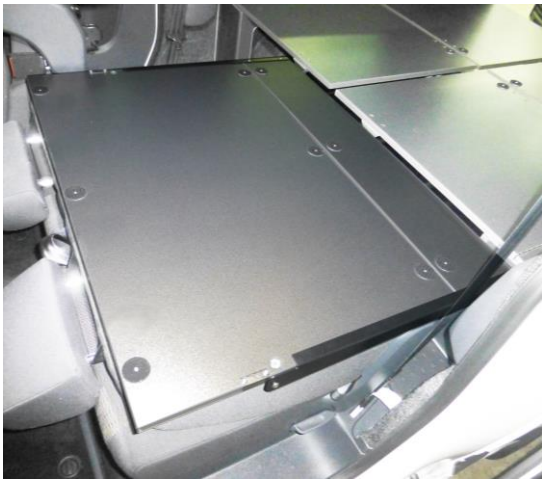


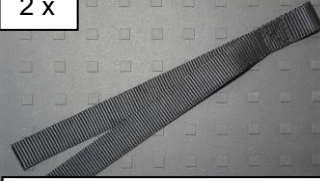



Pos. 3: vorderes Bettteil / Klappbank



Pos. 4, 5, 6: Tischplatte, -Bein und Tischschiene

Befestigungsset:

15 x 	4 x 	8 x 	2 x 
Holzschraube 3 x 16 mm, Senkkopf, schwarz	Anschraubflasche aus Flachprofil 100 x 20 x 2mm	Holzschraube 3,5 x 16mm Tellerkopf	Unterlegscheibe 37 x 13 x 3 mm
7 x 	6 x 	4 x 	12 x 
Bohrschraube 3,8 x 19 mm. Senkkopf	Bohrschraube 3,8 x 30 mm. Senkkopf	Kunststoff-Eckverbinder	Holzschraube 3,5 x 16 mm, Senkkopf
2 x 	2 x 	4 x 	4 x 
Verschlussbügel	Haltegurt	Tenax-Knopf mit Gegenstück	Bohrschraube 4,8 x 25 mm, Senkkopf
6 x 			
Holzschraube 4 x 16 mm, Rundkopf			

Benötiges Werkzeug

- Akkuschauber
- Kreuzschlitz-Bit PH 2
- Kreuzschlitz-Bit PH 1
- Torx-Bit TX 20
- Schere
- Feuerzeug

1 Fahrzeugvorbereitung

1. Ggf. eingebaute Sitzbank in 3. Sitzreihe entfernen
2. Kunststoff-Abdeckung der Heckschwelle ausbauen.
3. Untere Kunststoff-Seitenverkleidungen in Gepäckraum ausbauen.
4. Für die Abdeckung der freiliegenden Gurtrollen empfehlen wir, die Teile aus dem VW-Originalersatzteilsortiment zu bestellen: VW-Artikelnummer 2K0867264D 71N (Set rechts + links).

2 Bodenplatte einlegen


1. Bodenplatte auf Originalbodenbelag einlegen.
2. Bodenabschlussleiste für Vorderkante der Platte zuschneiden und festschrauben. Falls gewünscht, auch auf äußeren Enden der hinteren Kante (wird größtenteils von Kunststoff-Schwelle abgedeckt).



3. Kunststoff-Abdeckung der Heckschwelle wieder einbauen.

3 Einbau Korpus linke Radkastenverkleidung

1. Montage der Haltelaschen an die Korpus-Innenseite: Korpus in Einbauposition (im Bild grün markiert) bis an senkrechten D-Säule zurückschieben (im Bild gelbe Linie).
2. Dann Korpus auf den Boden klappen, vordere und hintere Laschenpositionen markieren und verschrauben.

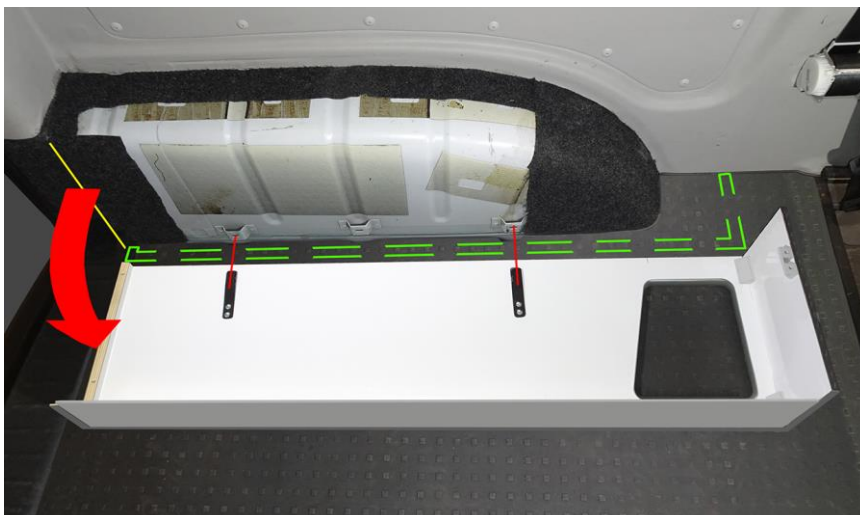

Anschraublasche aus
Flachprofil 100 x20 x 2 mm

Holzschraube 3,5 x 16 mm,
Tellerkopf

3. Zwei Unterlegscheiben an vorderer Schraubposition auf Radkasten positionieren (s. Abb. 3-1, Pfeil). Ggf. mit Klebeband fixieren.

4. Dann Korpus von oben mit angeschraubten Laschen in fahrzeugseitige Laschen einschieben.



Unterlegscheibe 37 x 13 x 3 mm

Abb. 3-1: Befestigung Korpus an Radkasten

5. Korpus von oben 2 x in Radkasten verschrauben



Bohrschraube 3,8 x 19 mm,
Senkkopf

Korpus in korrekter Position, Schraubpositionen

Verschraubung des Korpus in den Radkasten

6. Korpus in vorderem Fach mit Eckverbindern an C-Säule (vertikal) und in Bodenplatte (horizontal) verschrauben.



Bohrschraube 3,8 x 19 mm,
Senkkopf



Holzschraube 3,5 x 16 mm,
Senkkopf

4 Klapp-Platten des linken Bettes montieren


1. Klapp-Platten auf Radkastenkorpus auflegen, gegen Seitenwand und D-Säule schieben und mit 3 Schrauben festschrauben. (vorderste Schraube in Korpus-Seitenwand).



Bohrschraube 3,8 x 30 mm,
Senkkopf

5 Haltegurte für Klapp-Platten montieren

1. Bei Kunststoffhimmel bis 2014: Verschlussbügel in Position A mittig über Plattenfuge anschrauben.
2. Bei Formhimmel ab 2015: Verschlussbügel in Position B mittig über Plattenfuge anschrauben.

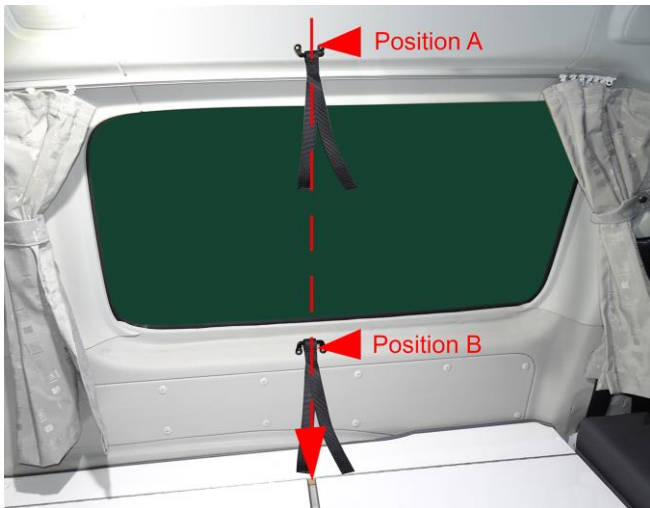

Verschlussbügel

Haltegurt

Bohrschraube 4,8 x 25 mm,
Senkkopf

6 Tenaxknöpfe in Gurte einsetzen

1. Jeweils eine Klapp-Platte mit aufgelegtem Polster hochklappen, Gurt seitlich herumziehen. Position für Tenax-Knopf anhand der Position des Gegenstückes auf Gurt markieren.
2. An Markierung rundes Loch $\text{\O}10$ mm in Gurt schneiden und Schnittkante mit Feuerzeug versiegeln.
3. Tenax-Knopf in Gurtloch einsetzen und verschrauben.





Tenax-Knopf mit Gegenstück

7 Vordere Bettplatte auf Rückbanklehne positionieren

1. Vordere Bettplatte mit Klapplehne auf Rückseite der Rückbanklehne aufkletten. Vorderkante bündig und parallel zur Lehnenkante ausrichten. Seitlich müssen ca. 10 mm Abstand zur Gurtrollenabdeckung sein!

! Bitte kontrollieren, dass Fahrzeugbanklehne einwandfrei aufstellbar ist und zuverlässig einrastet.

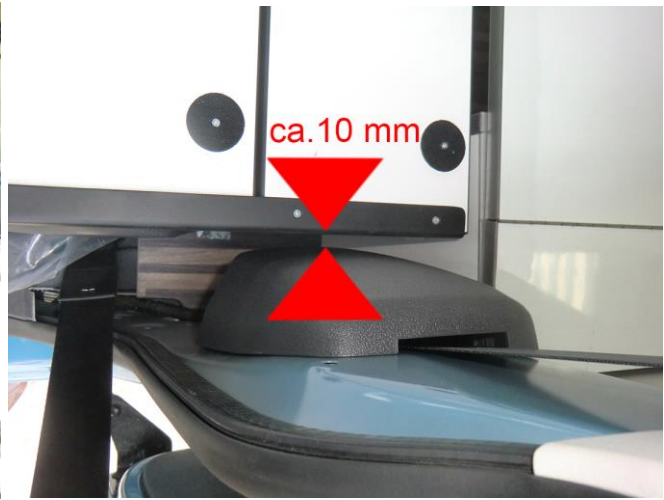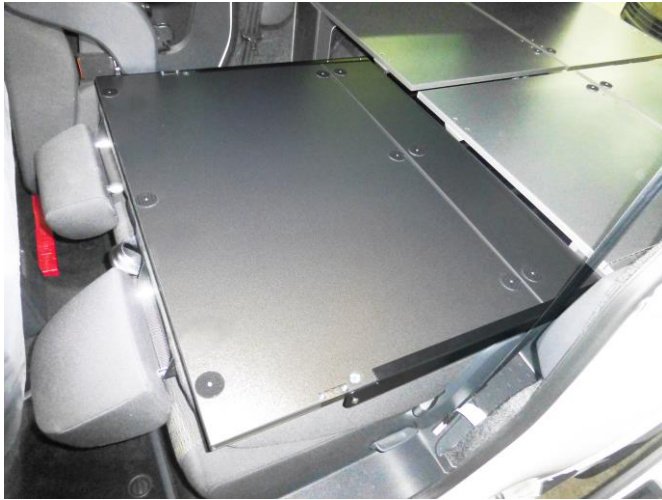

8 Polsterteile auflegen (Klettverbindungen beachten)


Damit ist die linke Bettseite fertiggestellt. (Bis hierher auch für Ausbau Camp gleich). Diese ist als Einzelbett verwendbar oder kann durch die rechte Bettseite zu einem Doppelbett ergänzt werden.

9 Montage rechte Bettseite

Die Montage der rechten Bettseite erfolgt analog der linken Seite spiegelbildlich.

10 Tischanlage

1. Zum Bettenbau wird die Tischplatte unter das Polster auf den umgeklappten Einzelsitz gelegt. Dadurch entsteht eine ebene Liegefläche.
2. Die Tischplatte kann z.B. an der Heckklappe mit 2 (selbst anzufertigenden) Winkelblechen und 2 Drehknöpfen, Reimo-Art.-Nr. 53291 verstaub werden.
3. Das Tischbein kann z.B. mit 2 Installationsschellen am Radkastenverkleidungskorpus verstaub werden.

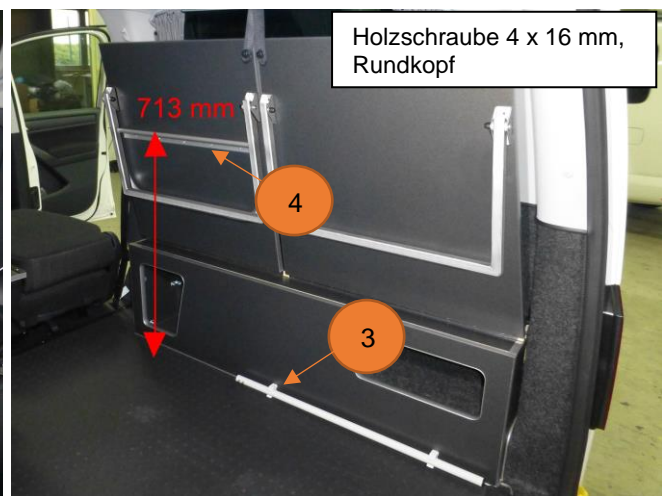

4. Die Tischschiene kann wahlweise rechts oder links auf die Unterseite einer Bett-Klapp-Platte montiert werden. Oberkante Tischschiene über Bodenplatte: 713 mm.

Damit ist Ihre Weekender-Einrichtung sicher im Fahrzeug verschraubt. Wir wünschen viel Spaß mit der Einrichtung. Ihr Reimo-Team.

Empfohlenes Zubehör

Art.-Nr.	Menge	Bezeichnung
71449	1	18 L-Kompressor-Kühlbox
19219	1	Vorhangset für Wohnraum (5 Fenster), blickdicht
37227	1	Thermomattenset, 8-teilig
46283	1 / 2	Moskitonetz für Schiebetür re / li
46284	1	Moskitonetz für Heckklappe
46208	1	Lüftungsgitter für Fahrer- und Beifahrertür
901151	2	Kederschiene für VW Caddy
93791	1	Heckzelt Trapez
93792	1	Heckzelt Vertic
900575	1	Sonnensegel Mauritius M, Breite 460cm
90068	1	Sonnensegel Charlyne 2.2
93701	1	Vorzelt Tour Compact
2211801	1	Schlafdach Caddy Maxi
22122	1	Verstärkungsrahmen für Schlafdach
22123	1	Schlafdach-Bett

13602, 13500, 13503, 13502**EN: Installation instructions interior Weekender in VW Caddy 4 Maxi****Vehicle assignment***Overview of the relevant technical data of the base vehicle.*

Brand	Model	Production period	Length [mm]
Volkswagen	Caddy 4 Maxi (passenger car)	2008 - 2020	4875

Product illustration**Tip:** With the Weekender equipment installed, the vehicle can still be used as a 5-seater.

Overview of the main components

Number	Quantity	Item number	Description
1	1	13500	Floor plate
2	1	51220	Floor plate stripe (optional)
3	1	13602	Rear bed
3a	1		Mounting set (included in rear bed delivery)
3b	1		Cushion set, 7 pieces (included in rear bed delivery)
4	1	13503	Table top
5	1	57000	Table leg
6	1	57056	Table rail with Quick Clip fitting



Pos. 1: Floor plate (decor may be different)




Pos. 2: Floor plate stripe



Pos. 3: Rear bed, left assembly



Pos. 3: Rear bed, right assembly

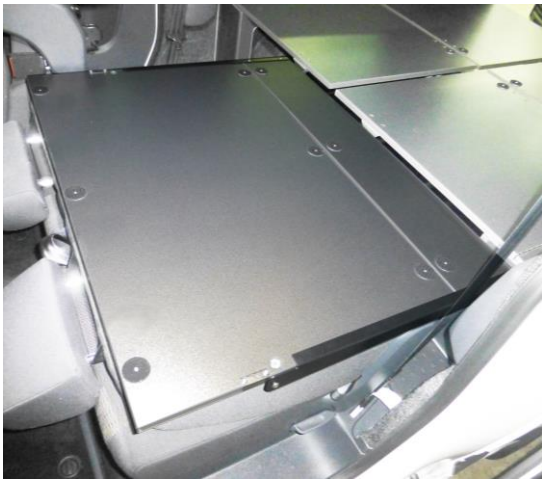














Pos. 3: Front bed part / folding bench



Pos. 4, 5, 6: Table top, leg and table rail

Mounting set:

<p>15 x</p> 	<p>4 x</p> 	<p>8 x</p> 	<p>2 x</p> 
<p>Wood screw 3 x 16 mm, countersunk head, black</p>	<p>fixation lug, made of flat profile 100 x20 x 2mm</p>	<p>Wood screw 3,5 x 16mm, flat head</p>	<p>washer 37 x 13 x 3 mm</p>
<p>7 x</p> 	<p>6 x</p> 	<p>4 x</p> 	<p>12 x</p> 
<p>Self drilling screw 3,8 x 19 mm, countersunk head</p>	<p>Self drilling screw 3,8 x 30 mm, countersunk head</p>	<p>Plastic corner connector</p>	<p>Wood screw 3,5 x 16 mm, countersunk head</p>
<p>2 x</p> 	<p>2 x</p> 	<p>4 x</p> 	<p>4 x</p> 
<p>Locking bracket</p>	<p>Retaining strap</p>	<p>Tenax-knob with counter-part</p>	<p>Self drilling screw 4,8 x 25 mm, countersunk head</p>
<p>6 x</p> 			
<p>Wood screw 4 x 16 mm, round head</p>			

Required tools

- Cordless screwdriver
- Cross-recess bit PH 2
- Cross-recess Bit PH 1
- Torx-Bit TX 20
- Scissors
- Lighter

1 Preparation of vehicle

1. If necessary, remove installed seat bench in 3rd seat row / Remove seatbench in 3d seat row
2. Remove plastic cover of rear sill.
3. Remove lower plastic side trim in luggage compartment.
4. For the cover of the revealed belt rollers we recommend to order the parts from the VW original spare parts assortment: VW part number 2KO867264D 71N (set right + left).

2 Installing the floor plate


1. Insert floor plate on original floor covering.



2. Cut floor trim strip to length for front edge of plate and screw red, also on outer ends of rear edge (is mostly covered by plastic sill).
3. Reinstall plastic cover of rear sill.

3 Installation of body left wheel arch trim

1. Install the fixation lugs on the inside of the furniture body: push the body back to the installation position (marked green in the picture) as far as the vertical D-pillar (yellow line in the picture).
2. Then fold the body onto the floor, mark the front and rear lug positions and screw into place.

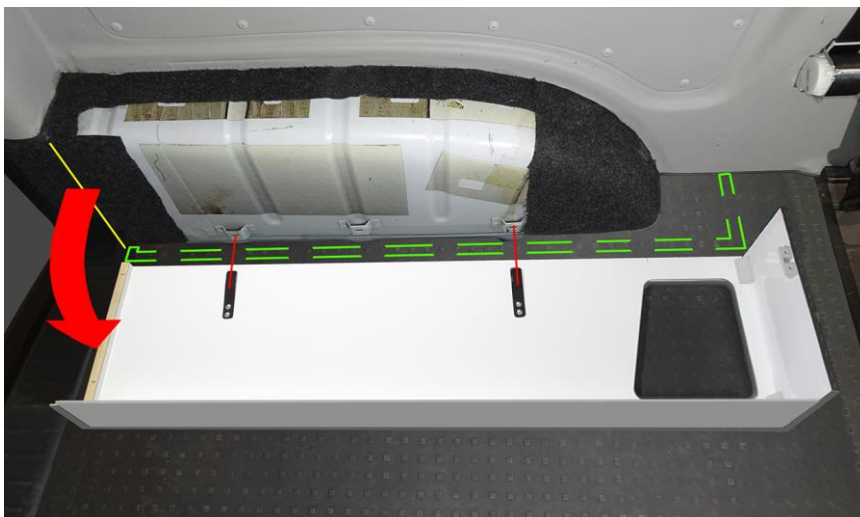

fixation lug, made of flat profile 100 x20 x 2mm

Wood screw 3,5 x 16mm, flat head

3. Position two washers at front screw position on wheel housing (see arrow in picture). If necessary, fix with adhesive tape.

4. Then push body from above with screwed-on lugs into lugs on vehicle side.



Washer 37 x 13 x 3 mm

5. Screw furniture body into wheel housing from above 2 x.



Self drilling screw 3,8 x 19 mm, countersunk head

Body in correct position, screw positions

Screwing body into wheel housing

6. Screw carcass in front compartment with corner connectors to C-pillar (vertical) and in floor plate (horizontal)..



Self drilling screw 3,8 x 19 mm, countersunk head



Wood screw 3,5 x 16 mm, countersunk head


4 Installing the folding plates of the left bed

Place folding panels on wheel housing carcass, push against side wall and D-pillar and screw tight with 3 screws. (foremost screw in corpus side wall).



5 Fitting the retaining straps for the folding panels

1. For plastic headliners up to 2014: screw fastening bracket in position A centrally over panel joint.
2. For molded headliners from 2015: screw the locking bracket in position B centrally over the panel joint.

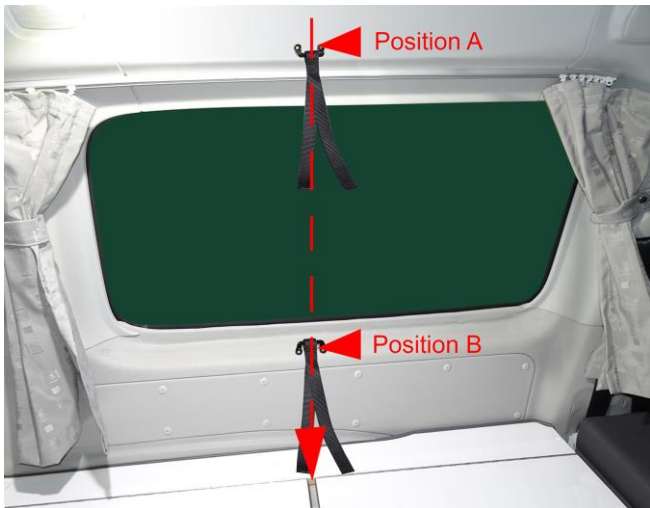


Locking bracket

Retaining strap

Self drilling screw 4,8 x 25 mm,
countersunk head

6 Inserting Tenax knobs in straps

1. Fold up one folding panel with pad in place, pull belt around to the side. Mark position for Tenax button on the basis of the position of the counterpart on the belt.
2. Cut a round hole $\varnothing 10$ mm in the belt at the mark and seal the cut edge with a lighter.
3. Insert Tenax button into belt hole and screw in place.


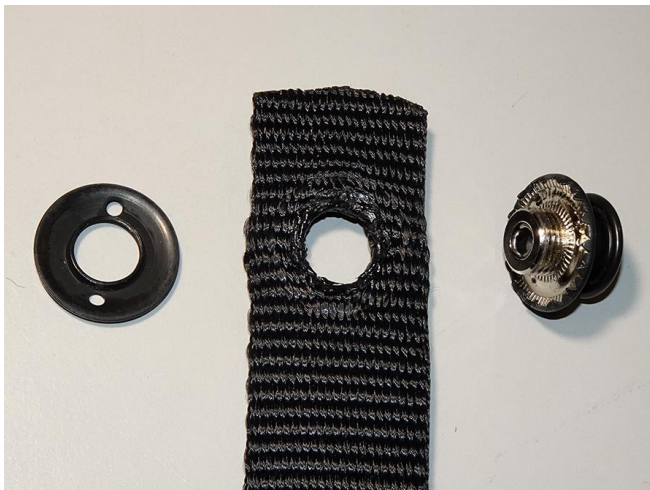


Tenax-knob with counterpart

7 Positioning the front bed plate on the rear seat backrest

Connect by velcro the front bed plate with folding backrest to the rear of the rear seat backrest. Align front edge flush and parallel to backrest edge. There must be approx. 10 mm "air" at the sides to the belt roller cover!

! Please check that the vehicle bench backrest can be set up properly and that it snaps into place reliably.

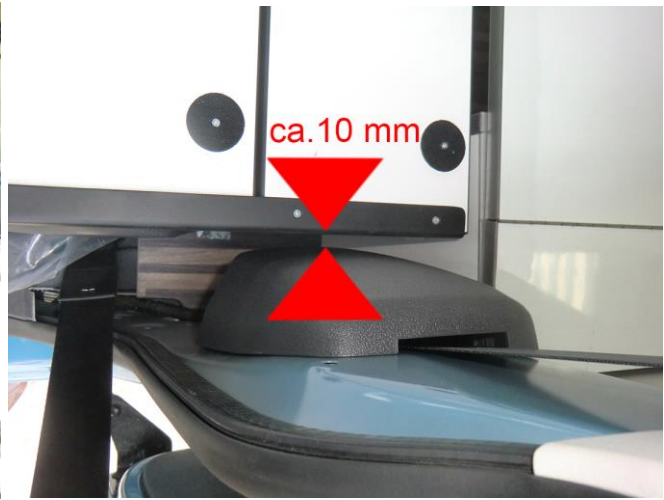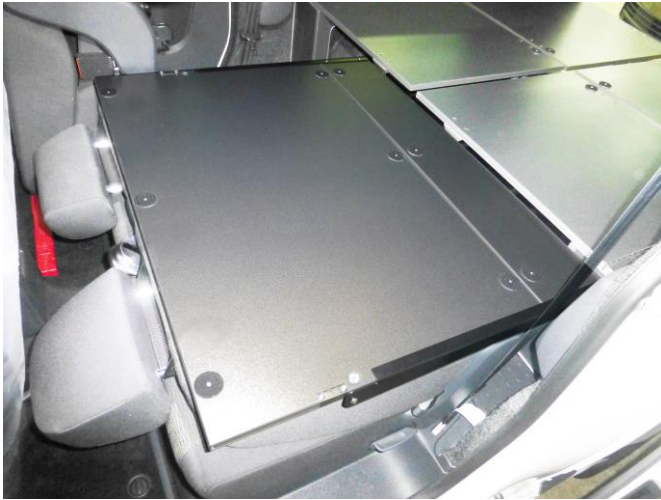

8 Place the upholstery parts (observe the Velcro connections)


Now the left side of the bed is completed. (Up to this point also the same for the Camp interior). This can be used as single bed or can be supplemented by the right bed side to form a double bed.

9 Assembling the right side of the bed

The right side of the bed is assembled in the same way as the left side (mirrored).

10 Table and table leg

1. For bed assembly, the table top is placed under the cushion on the folded down single seat. This creates a level lying surface.
2. The table top can be stowed e.g. at the tailgate with 2 angle plates (to be made by yourself) and 2 turning toggles, Reimo art.no.53291.
3. The table leg can be stowed e.g. with 2 installation clamps at the wheel housing trim body.

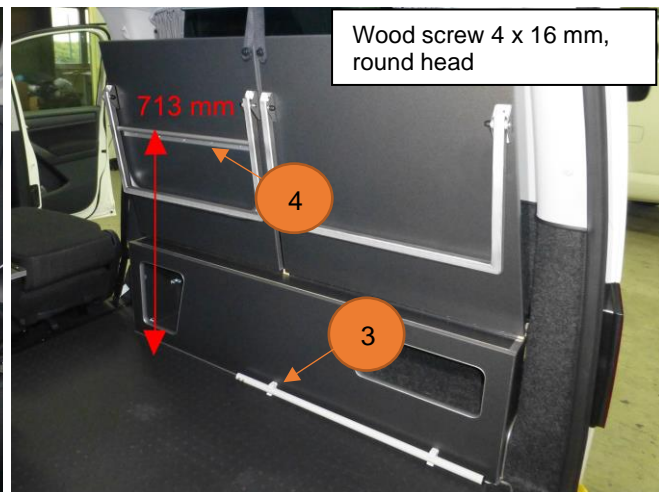

4. The table rail can be mounted either on the right or left side of the underside of a bed folding plate. Top edge of table rail above base plate: 713 mm.

Your Weekender equipment is thus fully and securely installed in the vehicle. We wish you much fun with this equipment Your Reimo team.

Recommended accessory

Item number	Quantity	Description
71449	1	18 L-compressor-cooling box
19219	1	Curtainset for living room (5 windows), blackout
37227	1	Isolation mat set, 8 parts
46283	1 / 2	Mosquito mesh for sliding door right / left side
46284	1	Mosquito mesh for tailgate
46208	1	Ventilation grill for drivers and codrivers door
901151	2	Piping rail für VW Caddy for tents and awnings
93791	1	Rear tent Trapez
93792	1	Reartent Vertic
900575	1	Sunsail Mauritius M, Breite 460cm
90068	1	Sunsail Charlyne 2.2
93701	1	Awning tent Tour Compact
2211801	1	Pop up roof Caddy Maxi
22122	1	Strengthening frame for pop up roof
22123	1	Bed for pop up roof