


SMART ROOM – MANUAL OVERRIDE

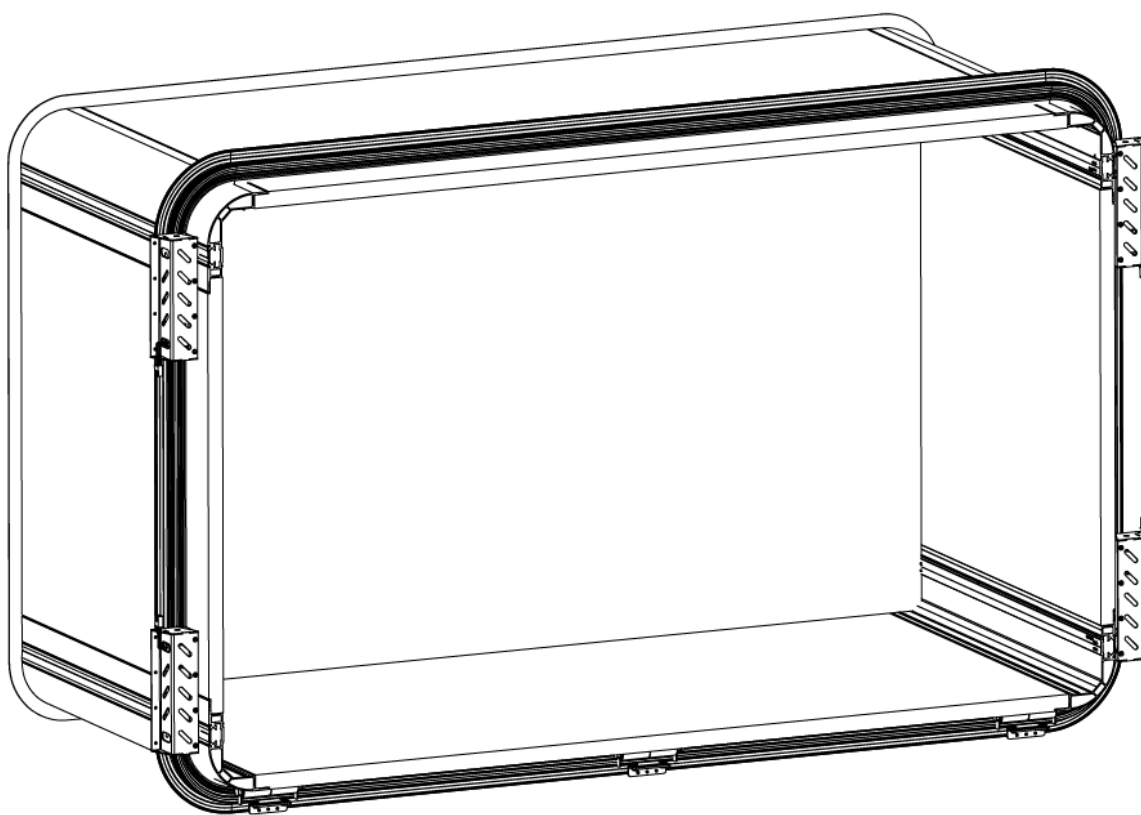

Revision n. 2
01/10/2019

Contents

1. Scope of the document	3
2. Description of the process	3
a) Removal of the covering of the four motors.	3
b) Check of the mechanical components	4
c) Rotation of the motor	4

1. Scope of the document

The scope of this document is the description of the procedure to move manually the Smart Room in case of emergency or maintenance.

2. Description of the process

a) Removal of the covering of the four motors.


The first step is the removal of the covering of the motors. The covering changes due the model of vehicle and this operation must follow indication of the supplier of the vehicle.



Picture 1 Removal of the covering

b) Check of the mechanical components

The first and very important step is to check whether the mechanical or plastic components are damaged. If these components are damaged, please contact supplier of the vehicle.

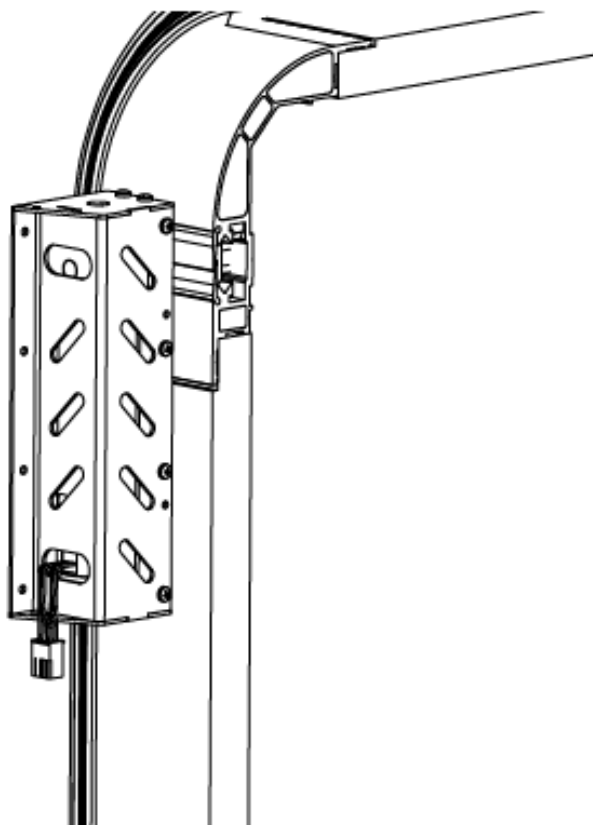

Picture 2 Check of the mechanical components.


c) Rotation of the motor

Move each motor using special tool 677-148-1-ZF00 (one piece for each Smart Room) with help of one electric screwdriver.

Move alternately and slowly each motor to keep Smart Room well aligned during the movement. Keep attention to avoid twist and damages of the Smart Room.



Picture 3 Special tool 677-148-1-ZF00.

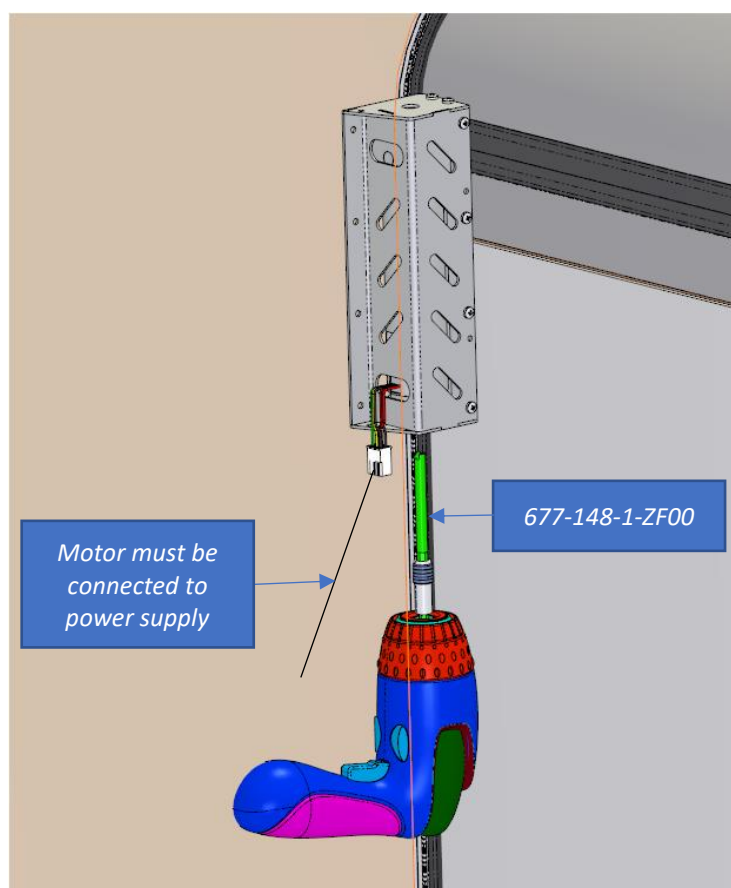

Picture 4 Motor movement with electric screwdriver.